



Select HDMI 1 for the PC

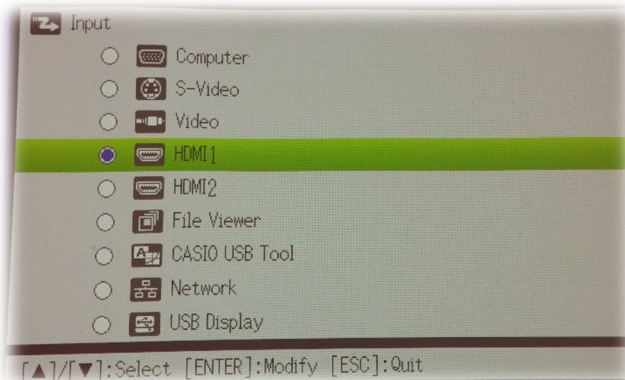

Select Computer for the Doc Cam

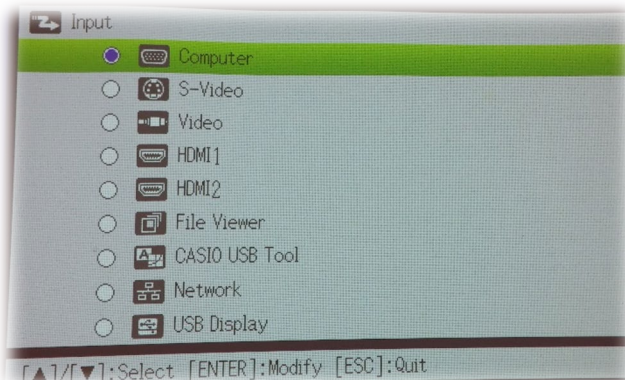

Select Video for the DVD/VHS player



Use this button to select inputs for the Computer, Doc Cam, or DVD

Power on/off

Use the arrow buttons to scroll to the desired input



- For duplicating Windows to other displays is not set correctly, please press Windows + P on your keyboard for duplicating options.